WELD ANCHOR

HAS TYPE


CARBON STEEL WITH RUST - PROOF OIL




INSTALLATION INSTRUCTION



1.Drilling hole with recommended diameter and depth.

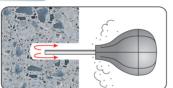

2.Cleaning hole.

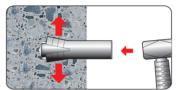

3.Insert weld anchor and hammer direct on body to expand anchor legs.



4. Anchor is set and ready to weld with various metals.

D

THE ANCHOR ITSELF CAN BE WELDED FOR INSTALLATION OF VARIOUS METAIS

HAS TYPE

CARBON STEEL WITH RUST - PROOF OIL

		mm	mm		kgf	mm	
Product	D		Drill Bit	Pull Out Figures	Shear	Depth of	
No.			Dilli Dit	Ultimate	Load	Embedment	1
HAS-1040	10.0	40	10.5	850	670	30	-
HAS-1045	10.0	45	10.5	850	670	30	
HAS-1050	10.0	50	10.5	1,250	750	40	
HAS-1055	10.0	55	10.5	1,250	750	40	
HAS-1060	10.0	60	10.5	1,250	750	40	







